

Комплекты переключателей Fabri-Level

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: gsx@nt-rt.ru || сайт: <https://gems.nt-rt.ru/>

Large Size – Alloys

FABRI-LEVEL™ Components and Kits Build Into Custom Switches in Minutes

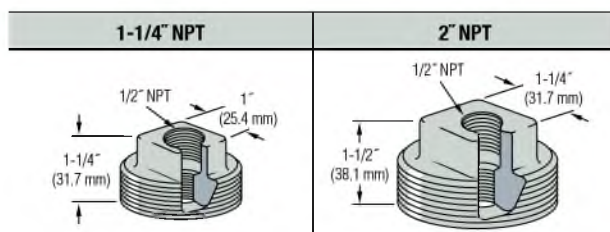
GEMS FABRI-LEVEL™ units can be custom-assembled in minutes from standard components, right in your plant. Simple instructions are furnished with kits.

FABRI-LEVEL™ Components


How to Order: Specify Part Number and quantity of each component required.

Mounting Types

Provides clearance for inserting unit in tank. 2" NPT Mounting must be used with stainless steel floats.



Material	Part Numbers	
Brass	26034	24408 ⚡
316 Stainless Steel	26033	24407 ⚡

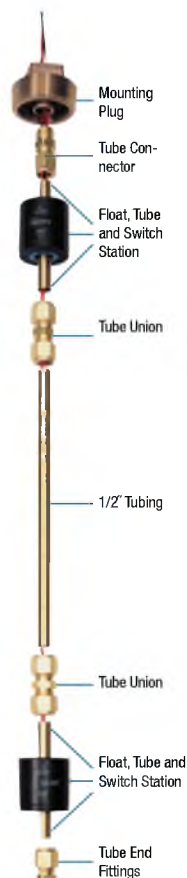




RoHS Compliant:

All LS-3 Series level switches featured on this page and the next are in compliance with EU-directive 2011/65/EC.

Level Station Assemblies

Each Station is comprised of a float, tube section and switch.

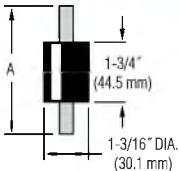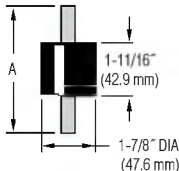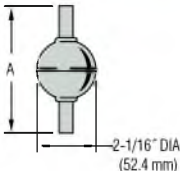Lead Wires: SPST: #18 AWG, 60' L., Teflon®; **SPDT:** #22 AWG, 60' L., Teflon®

Float Material			Buna N				316 Stainless Steel	
Compatible Mounting Type			1-1/4" NPT		2" NPT			
Float Dimensions								
Operating Temperature			Water: to +180°F (+82°C); Oil: -40°F to +230°F (-40°C to +110°C)				-40°F to +275°F (-40°C to +135°C)	
Pressure, PSI, Max.			150				750	
Min. Media Specific Gravity			.75		.55		.75	
Mounting Size	Switch Type	Tubing Material	Part Number	A Dim.	Part Number	A Dim.	Part Number	A Dim.
1-1/4" NPT	SPST 20 VA	Brass	26609	4" (101.6 mm)	—	—	—	—
		Stainless Steel	26608					
	SPDT 20 VA	Brass	26737	4-29/64" (113.0 mm)				
		Stainless Steel	26738					
2" NPT	SPST 20 VA	Brass	—	—	24410	4" (101.6 mm)	—	4-1/4" (107.9 mm)
		Stainless Steel			25328		24411 ⚡	
	SPDT 20 VA	Brass			24578	4-29/64" (113.0 mm)	—	4-29/64" (113.0 mm)
		Stainless Steel			25329		24579	

* See "Electrical Data" on Page X-5 for more information.

⚡ – Stock Items.

Fittings and Tubing

Description (1/2" Fittings)	Tube Connector	Tube Union	Tube End Fitting	90° Elbow	1/2" O.D. Tubing	
					10" Length	36" Length
Function	Connects tube to mounting plug, mounts unit from inside of tank.	Connects level stations or extension tubes.	Seals end of unit.	For side entry into tank	For extending units or level station spacing.	
Material	Part Numbers					
Brass (Nylon Ferrule)	24633 ↗	24412 ↗	24553 ↗	24631	25199 ↗	24637
All-316 Stainless Steel	24634 ↗	24413 ↗	24554 ↗	24632	25204	24638

FABRI-LEVEL™ Kits

FABRI-LEVEL Switch Kits contain all components for complete assembly of a 1- or 2-station level switch unit for pipe-plug mounting in your tank. Kits are available in several material and size combinations. N.O. or N.C. operation of the SPST switch is selectable by inverting the float(s) on the unit stem. Two 10" (254 mm) lengths of tube are furnished to space level stations as desired. Components available for custom-building other configurations are listed on the facing page and above.

Specifications

Kits use the components listed individually on the facing page and above. Please review for performance and dimensional data.

RoHS: In compliance with EU-directive 2011/65/EC requirements for chemicals and substances.

How To Order

Specify Kit Number and quantity.

Materials		Mounting NPT	Kit Number
Fittings	Floats		
Brass	Buna N	1-1/4"	26128 ⚡
		2"	24576 ⚡
316 Stainless Steel	Buna N	1-1/4"	26130
		2"	26675
316 Stainless Steel		2"	24577 ⚡

Warning: Improper application, assembly or installation of FABRI-LEVEL™ Kits or components may result in injuries to personnel or damages.

⚡ – Stock Items.



Each Kit Contains:

- 1 Tube Connector
- 1 Mounting Plug
- 2 Level Stations (Switch, Tube, Float)
- 2 Extension Tubes
- 1 Tube End Fitting
- 3 Tube Unions

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: gsx@nt-rt.ru || сайт: <https://gems.nt-rt.ru/>